


## A1 Collegamento in serie per LED in corrente costante Series connection for constant current LED

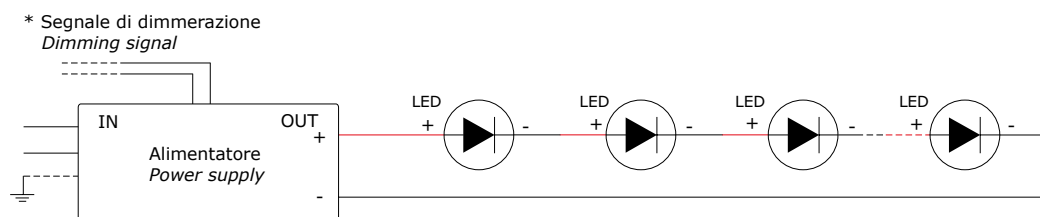


### Codici alimentatori Power supply codes

350 mA	500 mA
PSU.0001.0	PSU.0001.0
PSU.0023.0	PSU.0002.0
PSU.0024.0	PSU.0003.0
PSU.0025.0	PSU.0004.0
PSU.0026.0	PSU.0022.0
PSU.0027.0	PSU.0028.0
PSU.0030.0	PSU.0030.0
	PSU.0034.0

\* Versione dimmerabile / Dimmable version

## B1 Collegamento per 1 COB LED corrente costante Connection for 1 COB LED constant current

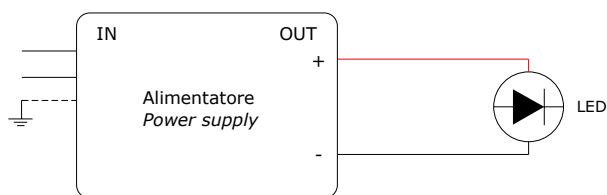


### Codici alimentatori Power supply codes

350 mA	500 mA
PSU.0001.0	PSU.0001.0
PSU.0023.0	PSU.0022.0
PSU.0024.0	PSU.0028.0
PSU.0025.0	PSU.0030.0
PSU.0026.0	PSU.0034.0
PSU.0030.0	

## C1 Collegamento in parallelo con alimentatori a tensione costante Parallel connection for constant tension power supply

### Codici alimentatori Power supply codes

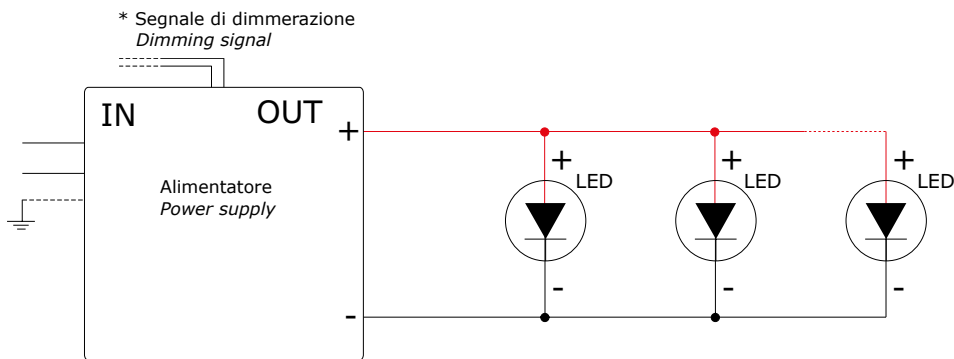


\* Versione dimmerabile / Dimmable version

#### 24 Vdc

PSU.0001.0  
PSU.0005.0  
PSU.0006.0  
PSU.0007.0  
PSU.0008.0  
PSU.0009.0  
PSU.0010.0  
PSU.0011.0  
PSU.0012.0  
PSU.0013.0  
PSU.0014.0  
PSU.0015.0  
PSU.0016.0  
PSU.0017.0  
PSU.0018.0  
PSU.0020.0  
PSU.0021.0  
PSU.0030.0

## C2 Collegamento in parallelo per sistemi monocromatici a 24 Vdc dimmerabili Parallel connection for 24 Vdc dimmable monochromatic systems

### Codici alimentatori Power supply codes

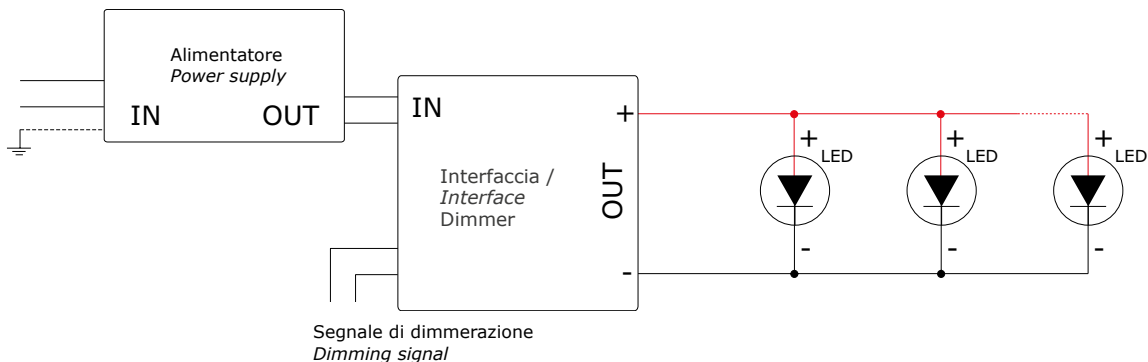

#### 24 Vdc

PSU.0001.0  
PSU.0005.0  
PSU.0006.0  
PSU.0007.0  
PSU.0008.0  
PSU.0009.0  
PSU.0010.0  
PSU.0011.0  
PSU.0012.0  
PSU.0013.0  
PSU.0014.0  
PSU.0015.0  
PSU.0016.0  
PSU.0017.0  
PSU.0018.0  
PSU.0020.0  
PSU.0021.0  
PSU.0030.0


#### DIMMER 0-10V

ECG.0030.0

#### Convertitore DALI DALI converter

ECG.0016.0

## D1 Collegamento in parallelo con alimentatori a tensione costante dimmerabile Parallel connection for constant tension power supply dimmable

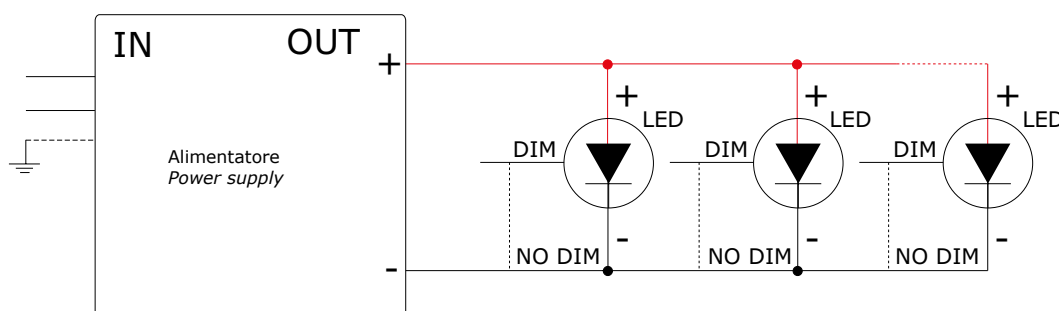

\* Versione dimmerabile (collegare il segnale di dimmerazione all'uscita del dispositivo dimmer cod. ECG.0002.0, ECG.0003.0 o dell'interfaccia DMX cod. ECG.0011.0 o ECG.0006.0 o del convertitore DALI cod.ECG.0028.0)

\* Dimmable version (connect the dimmable signal to the output of the dimmer device cod. ECG.0002.0, ECG.0003.0, to the DMX interface cod. ECG.0011.0 or ECG.0006.0 or to the DALI converter Cod. ECG.0028.0)

**Nota:** In caso di non dimmerazione collegare il cavo DIM al negativo


**Remark:** In case of non-dimming connect the DIM cable to the negative

### Codici alimentatori Power supply codes

#### 24 Vdc

PSU.0001.0  
PSU.0005.0  
PSU.0006.0  
PSU.0007.0  
PSU.0008.0  
PSU.0009.0  
PSU.0010.0  
PSU.0011.0  
PSU.0012.0  
PSU.0013.0  
PSU.0014.0  
PSU.0015.0  
PSU.0016.0  
PSU.0017.0  
PSU.0018.0  
PSU.0020.0  
PSU.0021.0  
PSU.0030.0

## E1 Collegamento in serie con controllo di corrente per LED in corrente costante Series connection with current control for constant current LED

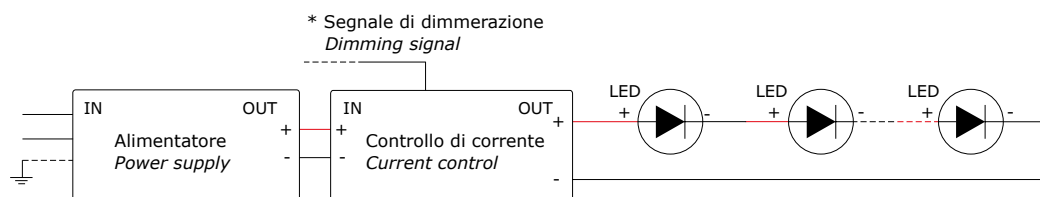

\* Versione dimmerabile (collegare il segnale di dimmerazione all'uscita del dispositivo dimmer cod. ECG.0002.0, ECG.0003.0 o dell'interfaccia DMX cod. ECG.0011.0 o ECG.0006.0 o del convertitore DALI cod.ECG.0028.0)

\* Dimmable version (connect the dimmable signal to the output of the dimmer device cod. ECG.0002.0, ECG.0003.0, to the DMX interface cod. ECG.0011.0 or ECG.0006.0 or to the DALI converter Cod. ECG.0028.0)

### Codici alimentatori Power supply codes


#### 24 Vdc

PSU.0001.0  
PSU.0005.0  
PSU.0006.0  
PSU.0007.0  
PSU.0008.0  
PSU.0009.0  
PSU.0010.0  
PSU.0011.0  
PSU.0012.0  
PSU.0013.0  
PSU.0014.0  
PSU.0015.0  
PSU.0016.0  
PSU.0017.0  
PSU.0018.0  
PSU.0020.0  
PSU.0021.0  
PSU.0030.0

### Codici controllo di corrente Current control code

**350 mA**    **500 mA**  
ECG.0012.0\*    ECG.0014.0\*

### F1 Collegamento in parallelo per dispositivi "DIMMER" Parallel connection for "DIMMER" devices

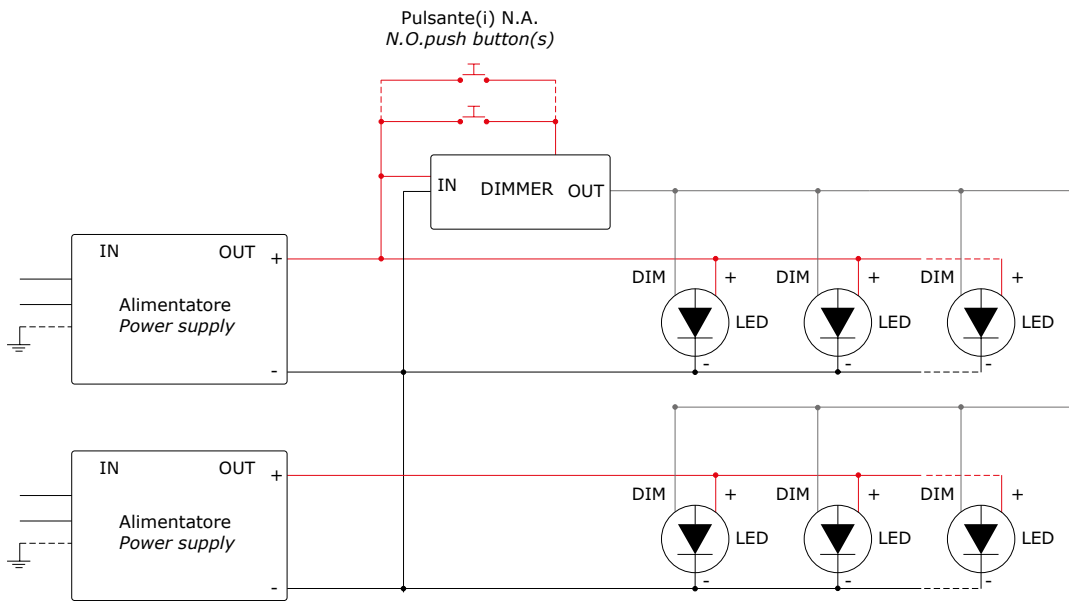

#### Codici alimentatori Power supply codes


##### 24 Vdc

PSU.0001.0  
PSU.0005.0  
PSU.0006.0  
PSU.0007.0  
PSU.0008.0  
PSU.0009.0  
PSU.0010.0  
PSU.0011.0  
PSU.0012.0  
PSU.0013.0  
PSU.0014.0  
PSU.0015.0  
PSU.0016.0  
PSU.0017.0  
PSU.0018.0  
PSU.0020.0  
PSU.0021.0  
PSU.0030.0

#### Codice DIMMER DIMMER code

ECG.0003.0

### G1 Collegamento in parallelo per dispositivi "DIMMER" Parallel connection for "DIMMER" devices

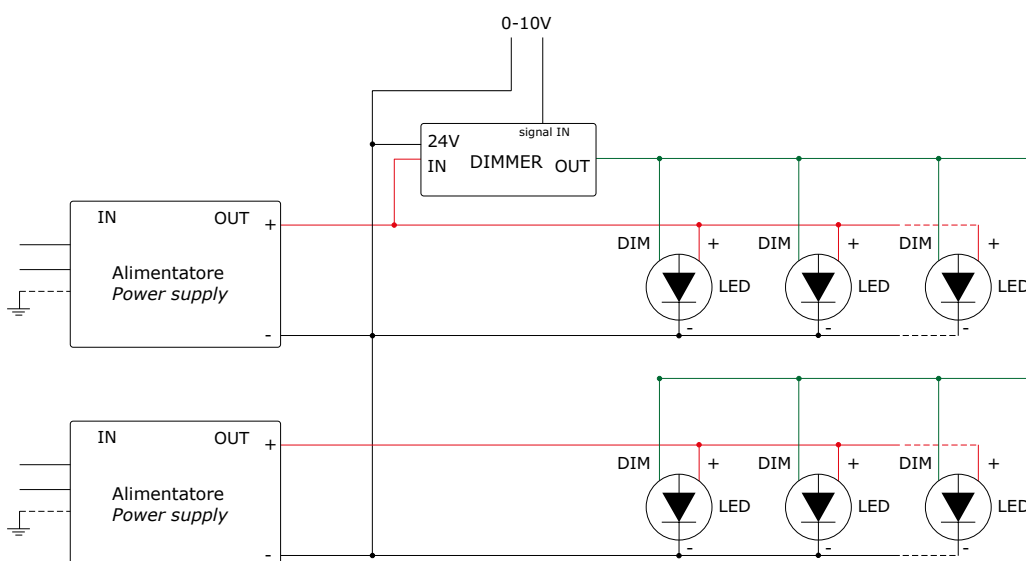

#### Codici alimentatori Power supply codes


##### 24 Vdc

PSU.0001.0  
PSU.0005.0  
PSU.0006.0  
PSU.0007.0  
PSU.0008.0  
PSU.0009.0  
PSU.0010.0  
PSU.0011.0  
PSU.0012.0  
PSU.0013.0  
PSU.0014.0  
PSU.0015.0  
PSU.0016.0  
PSU.0017.0  
PSU.0018.0  
PSU.0020.0  
PSU.0021.0  
PSU.0030.0

#### Codice DIMMER DIMMER code

ECG.0002.0

**H1** Collegamento in parallelo per sistemi sequencer  
*Parallel connection for systems with sequencer*

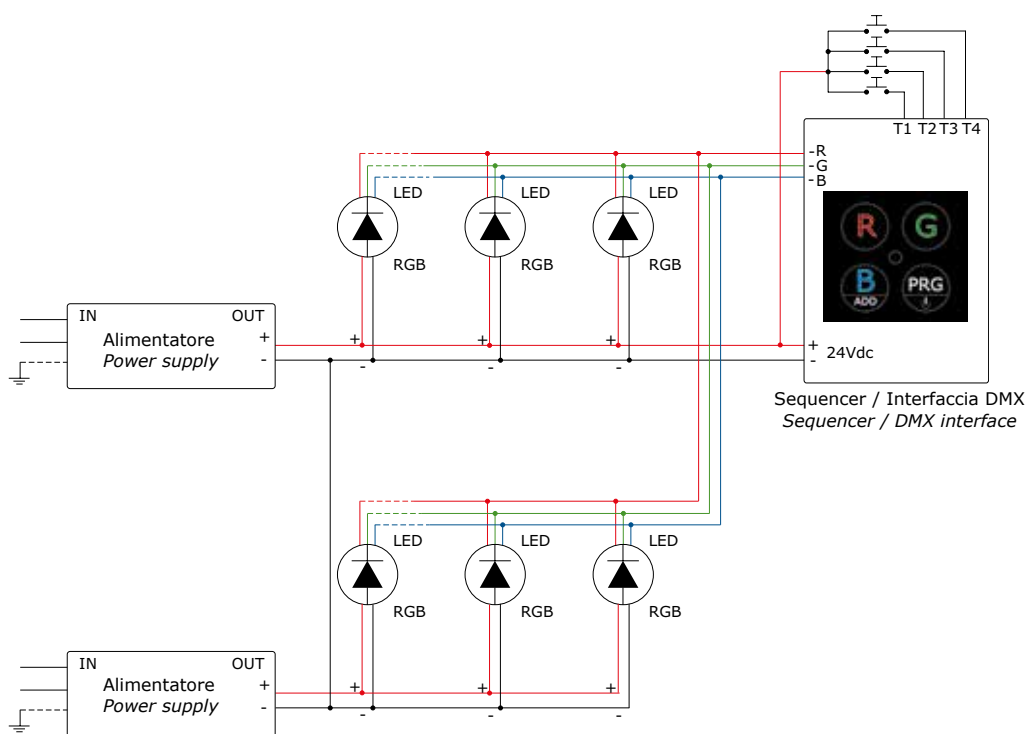

**Codici alimentatori**  
**Power supply codes**


**24 Vdc**

- PSU.0001.0
- PSU.0005.0
- PSU.0006.0
- PSU.0007.0
- PSU.0008.0
- PSU.0009.0
- PSU.0010.0
- PSU.0011.0
- PSU.0012.0
- PSU.0013.0
- PSU.0014.0
- PSU.0015.0
- PSU.0016.0
- PSU.0017.0
- PSU.0018.0
- PSU.0020.0
- PSU.0021.0
- PSU.0030.0

**Codice sequencer**  
**Sequencer code**

- ECG.0011.0

**I1** DMX/DALI - Collegamento in parallelo per sistemi monocromatici  
*DMX/DALI - Parallel connection for monochromatic systems*

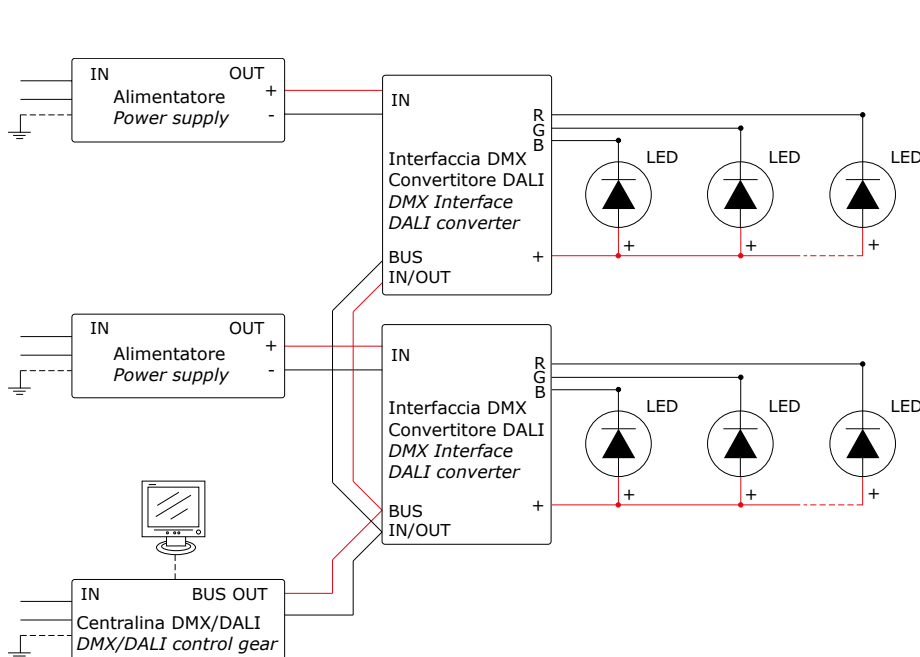

**Interfaccia DMX**  
**DMX interface**

- ECG.0006.0
- ECG.0011.0

**Centralina DMX**  
**DMX control gear**

- ECG.0001.0\*

**Convertitore DALI**  
**DALI converter**

- ECG.0028.0


**Codici alimentatori**  
**Power supply codes**

**24 Vdc**

- PSU.0001.0
- PSU.0005.0
- PSU.0006.0
- PSU.0007.0
- PSU.0008.0
- PSU.0009.0
- PSU.0010.0
- PSU.0011.0
- PSU.0012.0
- PSU.0013.0
- PSU.0014.0
- PSU.0015.0
- PSU.0016.0
- PSU.0017.0
- PSU.0018.0
- PSU.0020.0
- PSU.0021.0
- PSU.0030.0

\* PC richiesto solo per la programmazione / PC only needed for programming

**J1** DMX/DALI - Collegamento in parallelo per sistemi RGB/DWS 24 Vdc dimmerabili  
**DMX/DALI - Parallel connection for RGB/DWS 24 Vdc dimmable systems**

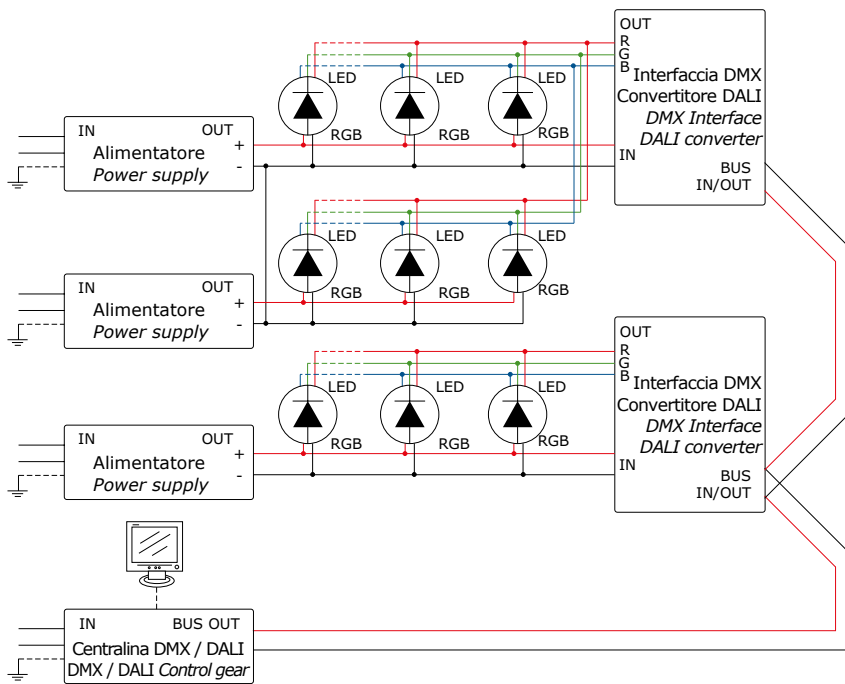

**Interfaccia DMX  
DMX Interface**

ECG.0006.0  
 ECG.0011.0

**Codici alimentatori  
Power supply codes  
24 Vdc**

PSU.0001.0  
 PSU.0005.0  
 PSU.0006.0  
 PSU.0007.0  
 PSU.0008.0

**Centralina DMX  
DMX Control gear**

ECG.0001.0 \*

PSU.0009.0  
 PSU.0010.0  
 PSU.0011.0  
 PSU.0012.0  
 PSU.0013.0  
 PSU.0014.0  
 PSU.0015.0  
 PSU.0016.0


**Convertitore DALI  
DALI Converter**

ECG.0028.0

PSU.0017.0  
 PSU.0018.0  
 PSU.0020.0  
 PSU.0021.0  
 PSU.0030.0

\* PC richiesto solo per la programmazione / PC only needed for programming

**K1** DMX/DALI - Collegamento in parallelo sistemi monocromatici a 24 Vdc dimmerabili  
**DMX/DALI - Parallel connection for 24 Vdc dimmable monochromatic systems**

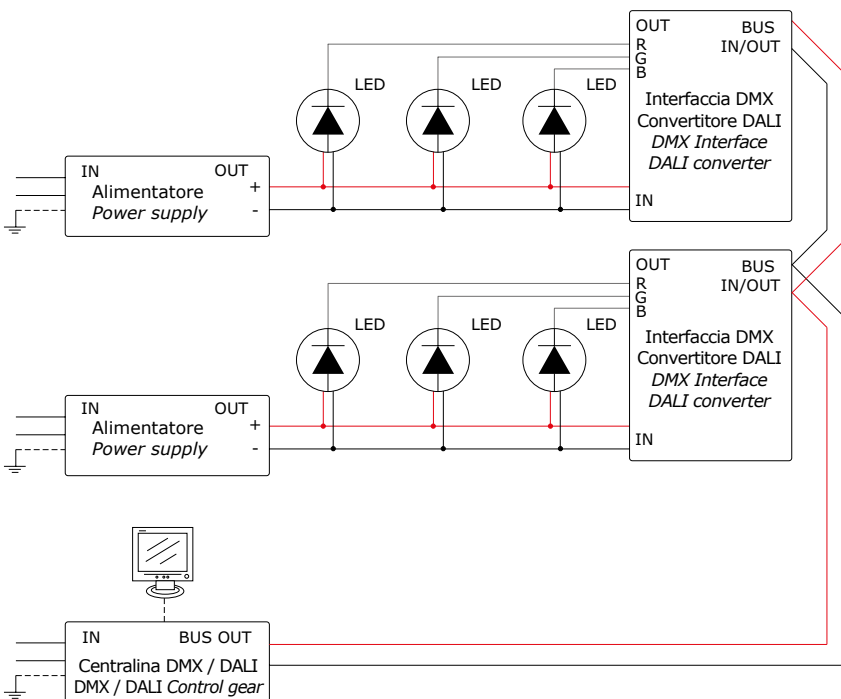

**Interfaccia DMX  
DMX Interface**

ECG.0006t.0  
 ECG.0011.0

**Codici alimentatori  
Power supply codes  
24 Vdc**

PSU.0001.0  
 PSU.0005.0  
 PSU.0006.0  
 PSU.0007.0  
 PSU.0008.0

**Centralina DMX  
DMX Control gear**

ECG.0001.0 \*

PSU.0009.0  
 PSU.0010.0  
 PSU.0011.0  
 PSU.0012.0  
 PSU.0013.0  
 PSU.0014.0  
 PSU.0015.0  
 PSU.0016.0


**Convertitore DALI  
DALI Converter**

ECG.0028.0

PSU.0017.0  
 PSU.0018.0  
 PSU.0020.0  
 PSU.0021.0  
 PSU.0030.0

\* PC richiesto solo per la programmazione / PC only needed for programming

**L1** DMX - Collegamento in serie per LED in corrente costante  
**DMX - Series connection for constant current LED**

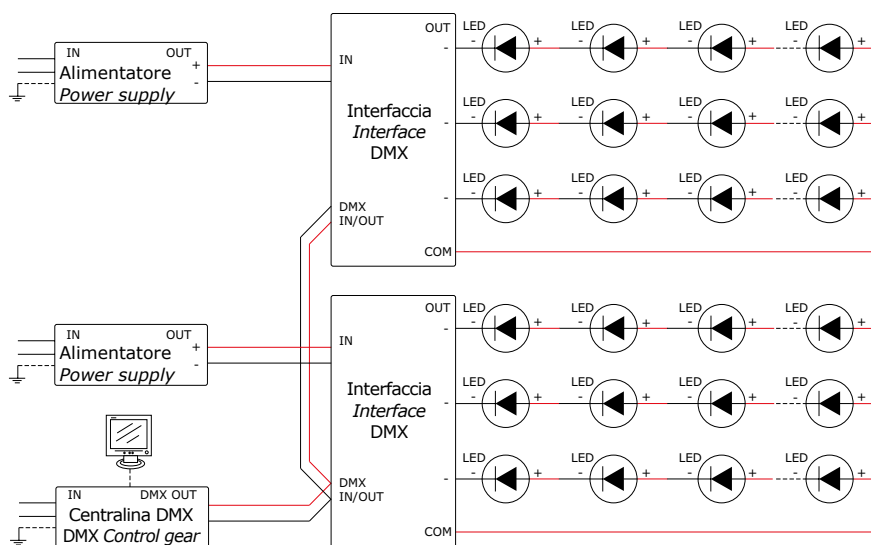

**Interfaccia DMX  
 DMX Interface  
 350 mA**

ECG.0005.0

**Interfaccia DMX  
 DMX Interface  
 500 mA**


ECG.0008.0

**Codici alimentatori  
 Power supply codes  
 24 Vdc**

- PSU.0001.0
- PSU.0005.0
- PSU.0006.0
- PSU.0007.0
- PSU.0008.0
- PSU.0009.0
- PSU.0010.0
- PSU.0011.0
- PSU.0012.0
- PSU.0013.0
- PSU.0014.0
- PSU.0015.0
- PSU.0016.0
- PSU.0017.0
- PSU.0018.0
- PSU.0020.0
- PSU.0021.0
- PSU.0030.0

\* PC richiesto solo per la programmazione / PC only needed for programming

**M1** DMX - Collegamento in parallelo per sistemi RGB MOVE  
**DMX - Parallel connection for RGB MOVE systems**

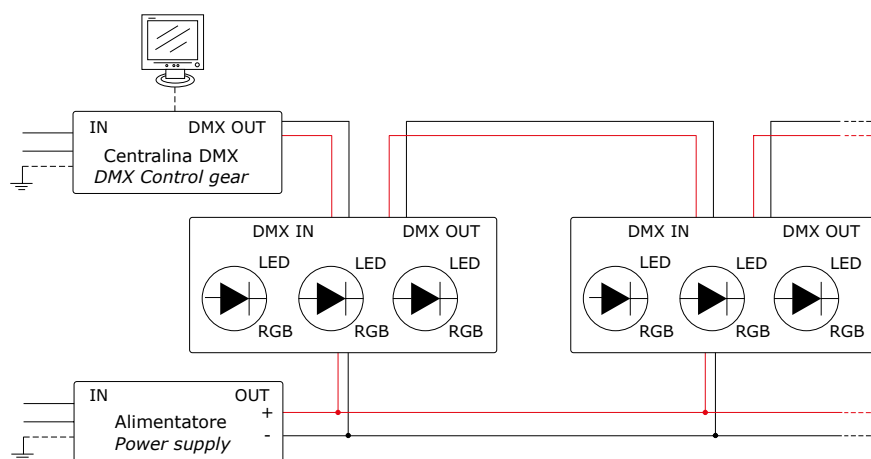

**Codici alimentatori  
 Power supply codes**

**24 Vdc**


- PSU.0001.0
- PSU.0005.0
- PSU.0006.0
- PSU.0007.0
- PSU.0008.0
- PSU.0009.0
- PSU.0010.0
- PSU.0011.0
- PSU.0012.0
- PSU.0013.0
- PSU.0014.0
- PSU.0015.0
- PSU.0016.0
- PSU.0017.0
- PSU.0018.0
- PSU.0020.0
- PSU.0021.0
- PSU.0030.0

\* PC richiesto solo per la programmazione / PC only needed for programming

**Centralina DMX  
 DMX Control gear**

ECG.0001.0 \*

**N1 DMX - Collegamento in parallelo per sistemi RGBW 24 Vdc dimmerabili**  
**DMX - Parallel connection for RGBW 24 Vdc dimmable systems**

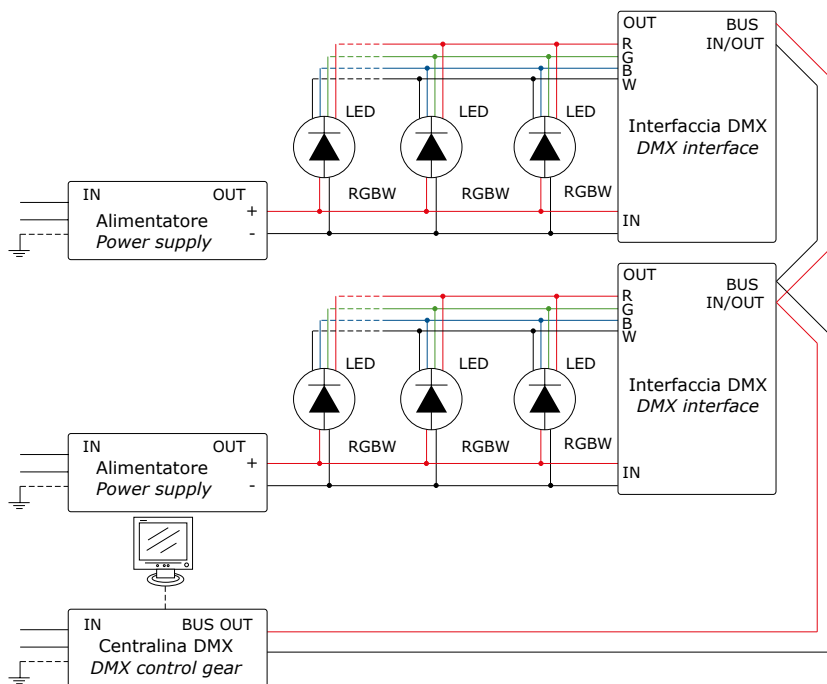

**Codici alimentatori**  
**Power supply codes**  
**24 Vdc**

- PSU.0001.0
- PSU.0005.0
- PSU.0006.0
- PSU.0007.0
- PSU.0008.0
- PSU.0009.0
- PSU.0010.0
- PSU.0011.0
- PSU.0012.0
- PSU.0013.0
- PSU.0014.0
- PSU.0015.0
- PSU.0016.0
- PSU.0017.0
- PSU.0018.0
- PSU.0020.0
- PSU.0021.0
- PSU.0030.0

**Interfaccia DMX**  
**DMX interface**


ECG.0007.0

**Centralina DMX**  
**DMX control gear**

ECG.0001.0 \*

\* PC richiesto solo per la programmazione / PC only needed for programming

**O1 DMX - Collegamento Splitter**  
**DMX - Splitter connection**

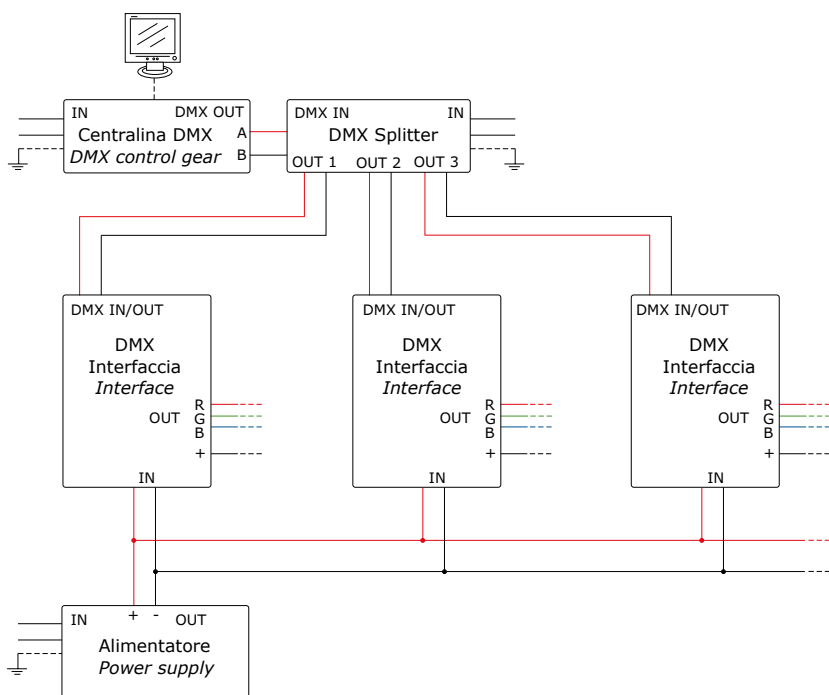

**Centralina DMX**  
**DMX control gear**

ECG.0001.0 \*

**Splitter DMX**  
**DMX Splitter**

ECG.0010.0

**Interfaccia DMX**  
**DMX interface**

ECG.0006.0  
 ECG.0011.0\*


**Codici alimentatori**  
**Power supply codes**  
**24 Vdc**

- PSU.0001.0
- PSU.0005.0
- PSU.0006.0
- PSU.0007.0
- PSU.0008.0
- PSU.0009.0
- PSU.0010.0
- PSU.0011.0
- PSU.0012.0
- PSU.0013.0
- PSU.0014.0
- PSU.0015.0
- PSU.0016.0
- PSU.0017.0
- PSU.0018.0
- PSU.0020.0
- PSU.0021.0
- PSU.0030.0

\* PC richiesto solo per la programmazione / PC only needed for programming



**P1 DALI - Collegamento in parallelo per sistemi monocromatici a 24 Vdc dimmerabili**  
**DALI - Parallel connection for 24 Vdc dimmable monochromatic systems**

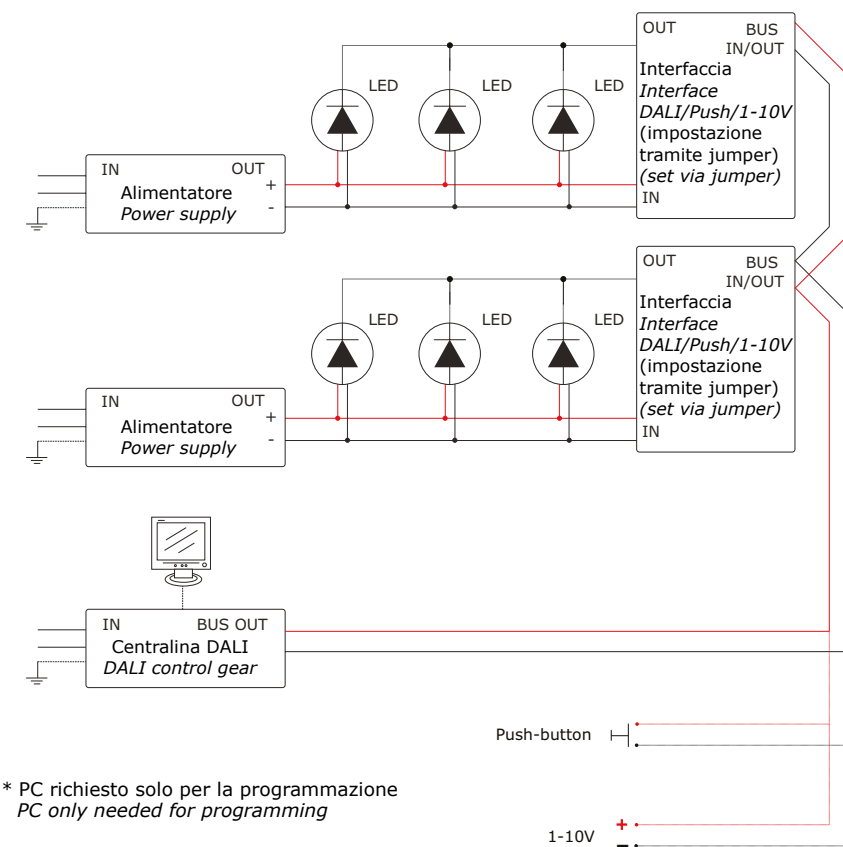

**Codici alimentatori**  
**Power supply codes**  
**24 Vdc**


- PSU.0001.0
- PSU.0005.0
- PSU.0006.0
- PSU.0007.0
- PSU.0008.0
- PSU.0009.0
- PSU.0010.0
- PSU.0011.0
- PSU.0012.0
- PSU.0013.0
- PSU.0014.0
- PSU.0015.0
- PSU.0016.0
- PSU.0017.0
- PSU.0018.0
- PSU.0020.0
- PSU.0021.0
- PSU.0030.0

**Convertitore DALI**  
**DALI converter**

ECG.0016.0\*

\* PC richiesto solo per la programmazione  
 PC only needed for programming

**Q1 Collegamento in parallelo per elettroluminescenza**  
**Parallel connection for electroluminescence**

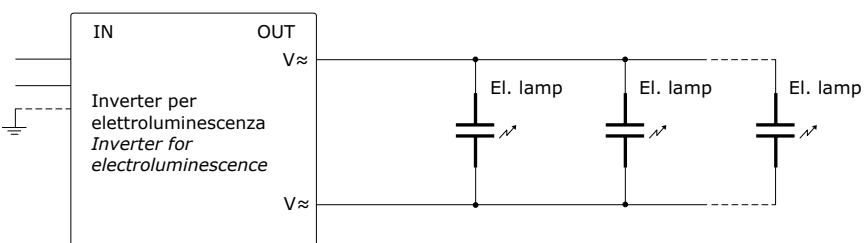

**Codici inverter**  
**Inverter codes**

- PSU.0031.0
- PSU.0032.0
- PSU.0033.0